- 74 mm -

This product is a wirel and product is a wine less transmission product specifically designed for audio transmission for recording photography. We do our best to present you with this low noise, low latency, high-quality resolution and effective long-distance transmission of wireless microphones. I hope you'll love it!

Main Features

- Main Features::

 This product gives you the following high-quality experience

 2.4GHz wireless transmission band, 24bit/48Hz sample rate.

 30 meters effective distance, get rid of the cable.

 Small size, ideal for content creation, film making, video or stage
- presentations, blogs, live streaming, etc.

 Up to 5 channels directconnection, one second pairing.

 5 hours of battery.

EN Precautions

Power supply
This product has a built-in rechargeable battery, the product accessories contain a factory standard with a drag two USB charging cable. You can connect the charging head of your phone or your computer's USB port to charge. When charging, make sure that the device is turned off to avoid the loss of power during charging, resulting in longer charging time and reduced battery life, and turn off when you are not using a wireless device, otherwise the battery will continue to consume.

Connection
Always turn off power and other related devices before the wireless device is disconnected, such as a camera or video recorder, which will help avoid device failure and damage other devices.

Interference
In practice, wireless systems are affected by two conditions:
(1)this device may not cause harmful interference, and


1 1

(1)this device may not cause harmful interference, and
(2)this device must accept any interference received, including the interference that may cause undesired operation.

EN Specification

■ Sample rate: 24bit/48KHz lossless digital transmission sound quality
■ Wireless Band: 2.4GHz
■ Delay: <12ms
■ Range: 30 meters outdoor or 15 meters wall distance
■ Built-in lithium-ion battery can be charged by USB
■ Charging device: USB charging cable supports charging
■ Signal-to-noise ratio: -98dB
■ Dynamic range: -105dB
■ Frequency response: 20 to 20K Hz, +1dB/-3dB
■ The transmitter acts as a collar-clip wireless microphone and can be used as a pocket-strapped transmitter
■ 5 sets of equipment can be supported to work at the same time
■ Single body size (mm): 60 (L) X45 (W) X20 (H)mm
■ Outer packaging dimensions (mm): 132 (W) x108 (W) x 65 (H)
■ Weight of a single body: 50g
■ Packaged weight: 250g
■ Accessories included: 2x fur windshield 1x carrying bag 1x instruction manual 2x USB charging cable 2x recording line.

2 1

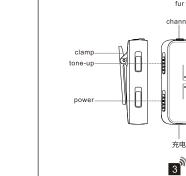

EN Product Introduction

Transmitter

①The transmitter acts as a collar-clip wireless microphone and can be used as a pocket-strapped transmitter.

②Battery/charge prompt: There are 5 indicators. When charging, the light gradually lights up to indicate that the charge is being charged. When fully charged, all the lights will light up. The light shows battery capacity when not charging. It will all go out when the battery runs out.


③Channel indicator: a total of 5 indicators, indicating 5 channels, transmitter and resolves need to be in the same changed to legicing reports.

and receiver need to be in the same channel to function properly

(4)USB charging interface: Charge with USB cable sits that come with the

(5)Transmitter power switch: Turn the device on or off.

(6) Channel switch button: after powering on, press and hold this button to switch channels, long press and press can switch to the next channel, the order from left to right switch channels, a total of 5 channels.

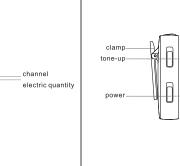

EN Product Introduction


Receiver

①Connect the receiver to the camera or recorder by the 3.55mm TRS output line and adjust the output to the camera or recorder using a maximum value of 6dB gain control.
②Battery/charge prompt: There are 5 indicators. When charging, the light gradually lights up to indicate that the charge is being charged. When fully charged, all the lights will light up. The light shows battery capacity when not charging. It will all go out when the battery runs out.
③Channel indicator: a total of 5 indicators, indicating 5 channels, transmitter and receiver need to be in the same channel to function property.

transmitter and receiver need to be in the same channel to function properly @USB charging interface: Charge with USB cable sits that come with the

(5)Transmitter power switch: Turn the device on or off.

©Channel switch button: after powering on, press and hold this button to switch channels, long press and press can switch to the next channel, the order from left to right switch channels, a total of 5 channels.

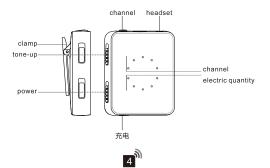

EN How To Use

■Clamp the wireless transmitter in the neckline or camera back strap and

■Clamp the wireless transmitter in the neckline or camera back strap and connect the receiver to the input of the camera and the VCR.
■Turn on the power supply of the transmitter and receiver, and the blue power light for the transmitter and receiver lights up. If the battery power decreases, the number of lights on the lamp decreases. If the power LED is not lit, the battery is exhausted and needs to be charged to use.
■Select paired channels: 1-5 sets of channels are selectable, and the transmitter and receiver must select the same channel.

If the transmitter selects the channel 2, the receiver must also select channel 2. If the channel is different, the receiver's light flashes slowly to indicate that no signal is received.
■Please charge your transmitter and receiver via the USB port. The battery capacity indicator lights up cycle-by-cycle from first to last when charging until all the light lights up when the charge is fully charged.
■This product can support 5 sets of independent transmitters and receivers operating simultaneously in the same environment.
■The wireless system can also support a transmitter to send a signal to multiple receivers.



5

EN FAQ

1.0: Device cannot be powered on and doesn't work.

low battery, and you need to charge it and activate the battery.

2.Q:Device can be powered on, but can't operate or no sound at all. A: Check wether the Transmitter and Receiver selects the same channel, if not, please select the same channel then retry.

3.Q: Strange noise while in use.

A: There can be strong electromagnetic interference, too far transmission distance, too many transmission obstacles, so most communications are lost. Please keep the transmission distance as short as possible.

4.Q: Device cannot be charged properly.

A: Lithium batteries go into protective state when they are low for a long time, so they need to be recharged about 10 minutes to active the battery.

5.Q: Can multiple Receivers receive signals from one Transmitter at the same time?
A: Yes. You only need to select multiple Receivers for the same channel and then select the Transmitter to that channel.

Warning ■ to reduce the risk of electric shock or fire, do not expose the device in

rainy or humid conditions.

■ turn the device off before charging, which avoids too long



